
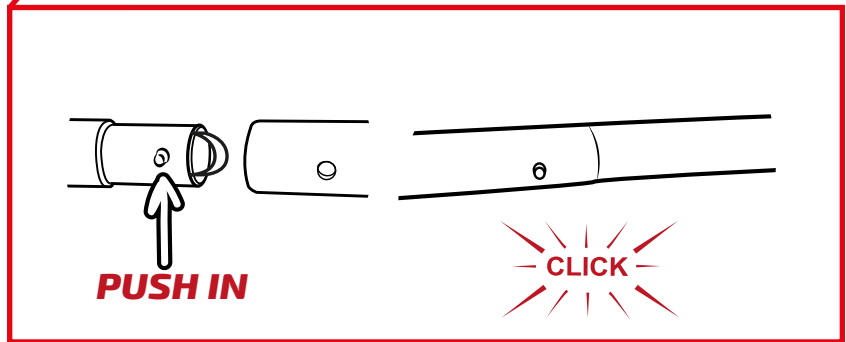


Modulate Straight Frames

Modulate 810 (Straight)

Aug 2018

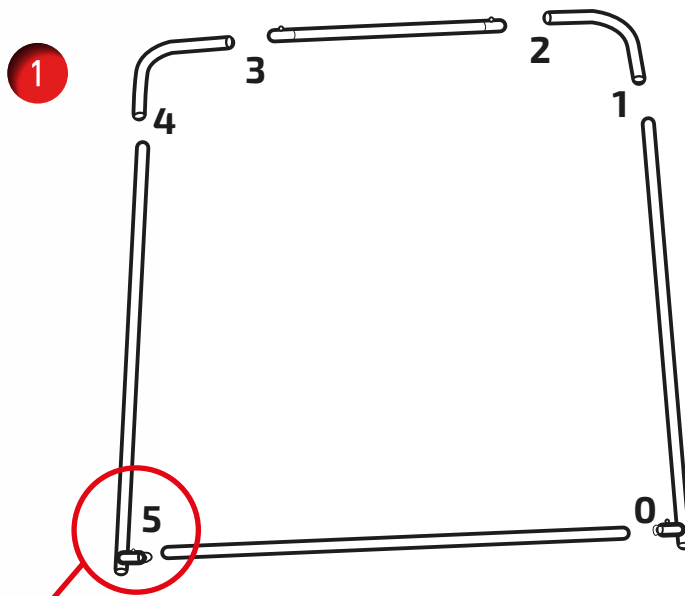


PARTS (NOT TO SCALE)

Vertical Pole Sections (x2)




Bottom Pole Sections (x1)




Top Pole Section (x1)



Radius Top Corner Sections (x2)




Feet




Gloves



Optional Half Feet





NOT SUPPLIED WITH KIT AND
THEY ARE SOLD SEPARATELY

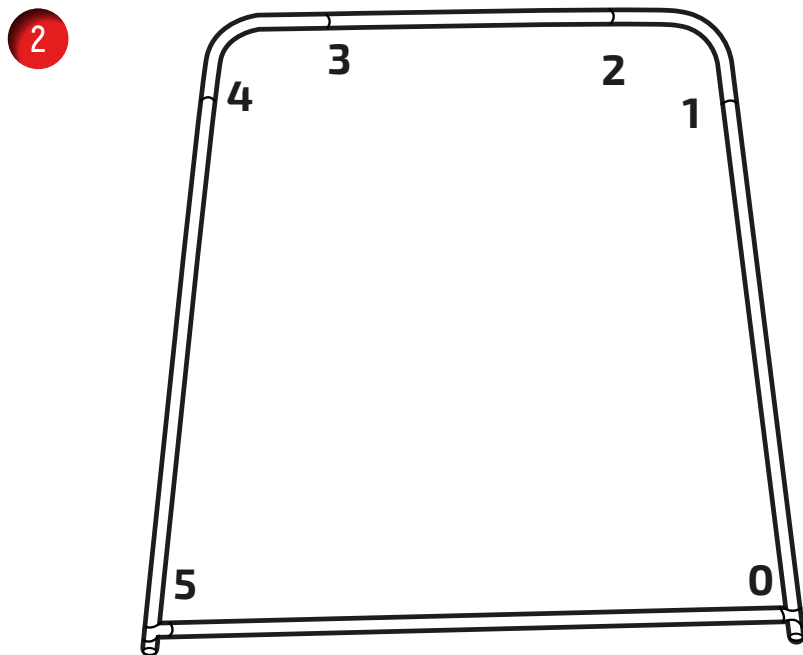

Modulate Straight Frames Modulate 810 (Straight)

Aug 2018

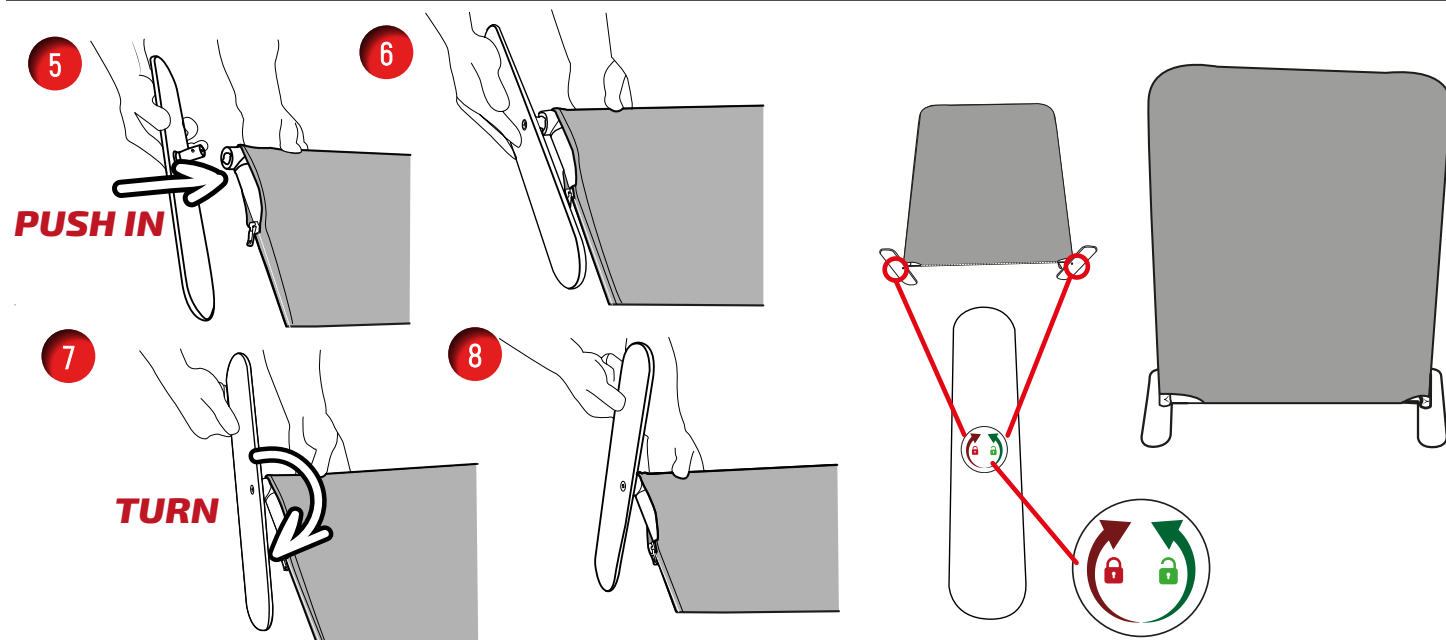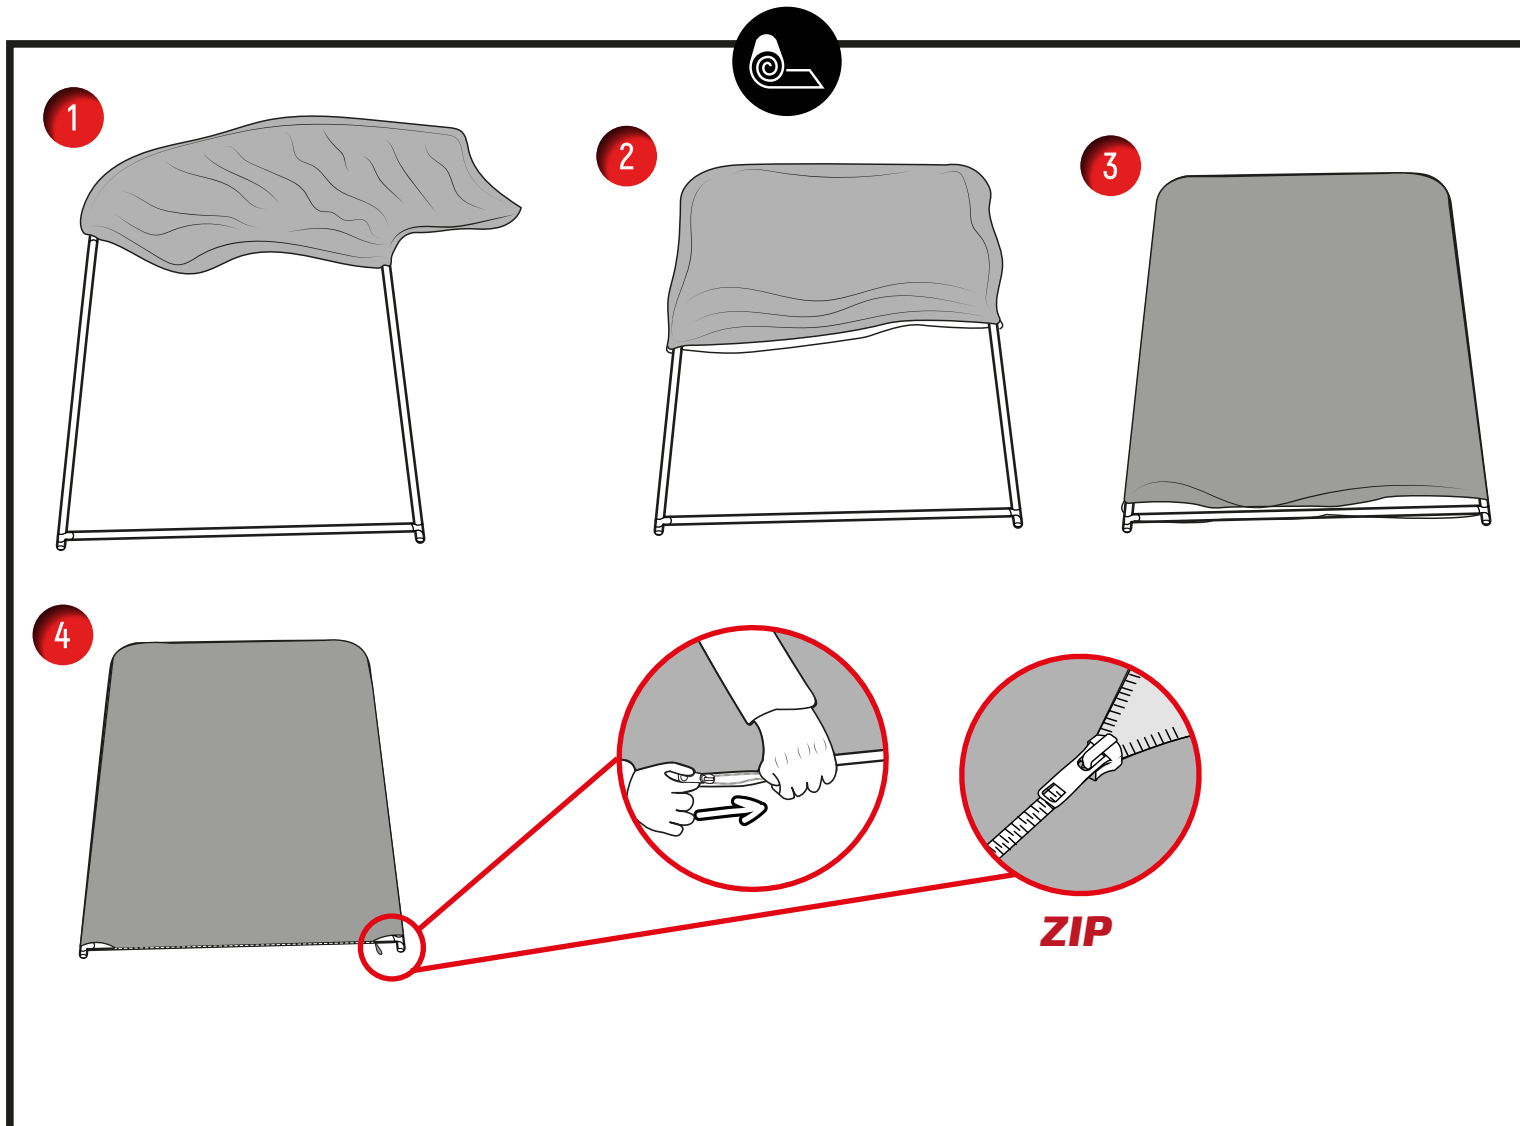

Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot






NOTE: Sticker on base of foot shows the directions for locking/unlocking foot

NOTE: TWO POSITIONS FOR THE FEET (SEE OPTION 1 FOR SECOND POSITION)








OPTIONAL (HALF FEET)

OPTION 1 NOTE: HALF FEET CAN BE POSITIONED ONTO THE FRAME TWO DIFFERENT WAYS

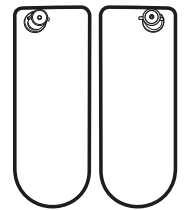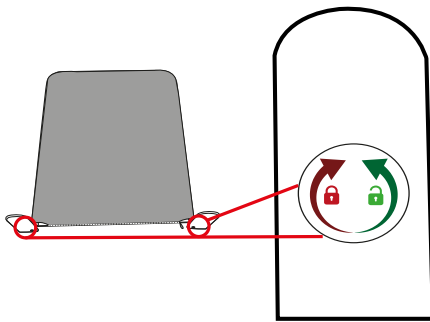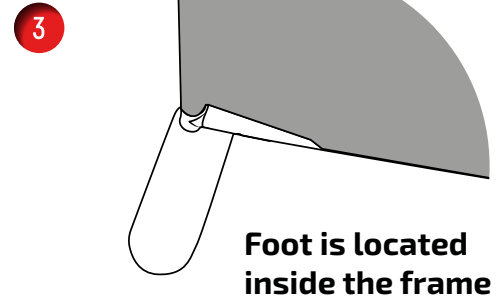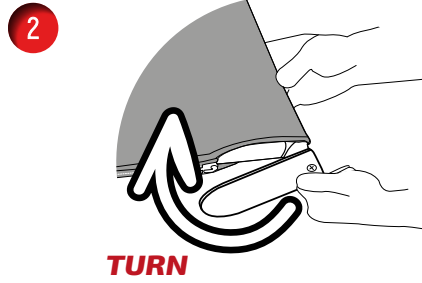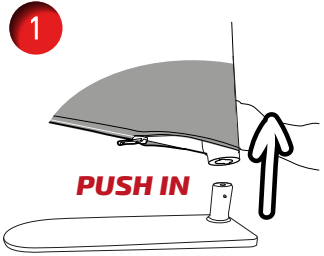


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

OPTION 2

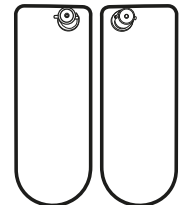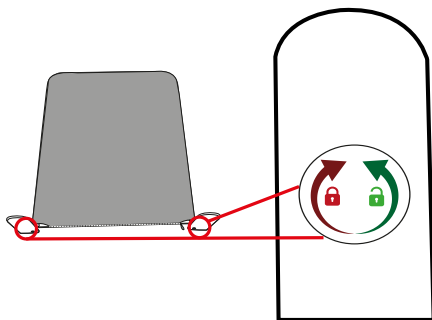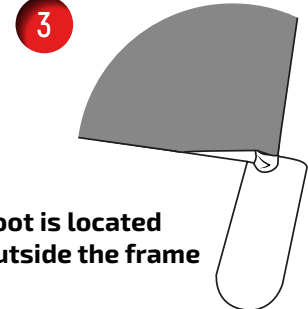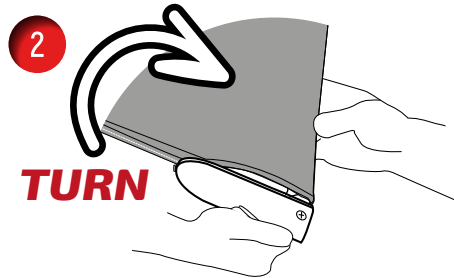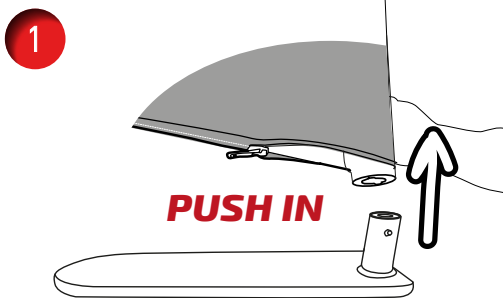


Turn clockwise to lock foot in position
Turn anti-clockwise to unlock foot

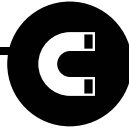

CONNECTING MULTIPLE FRAMES

NOTE: SECOND FRAME (820 STRAIGHT NOT INCLUDED)

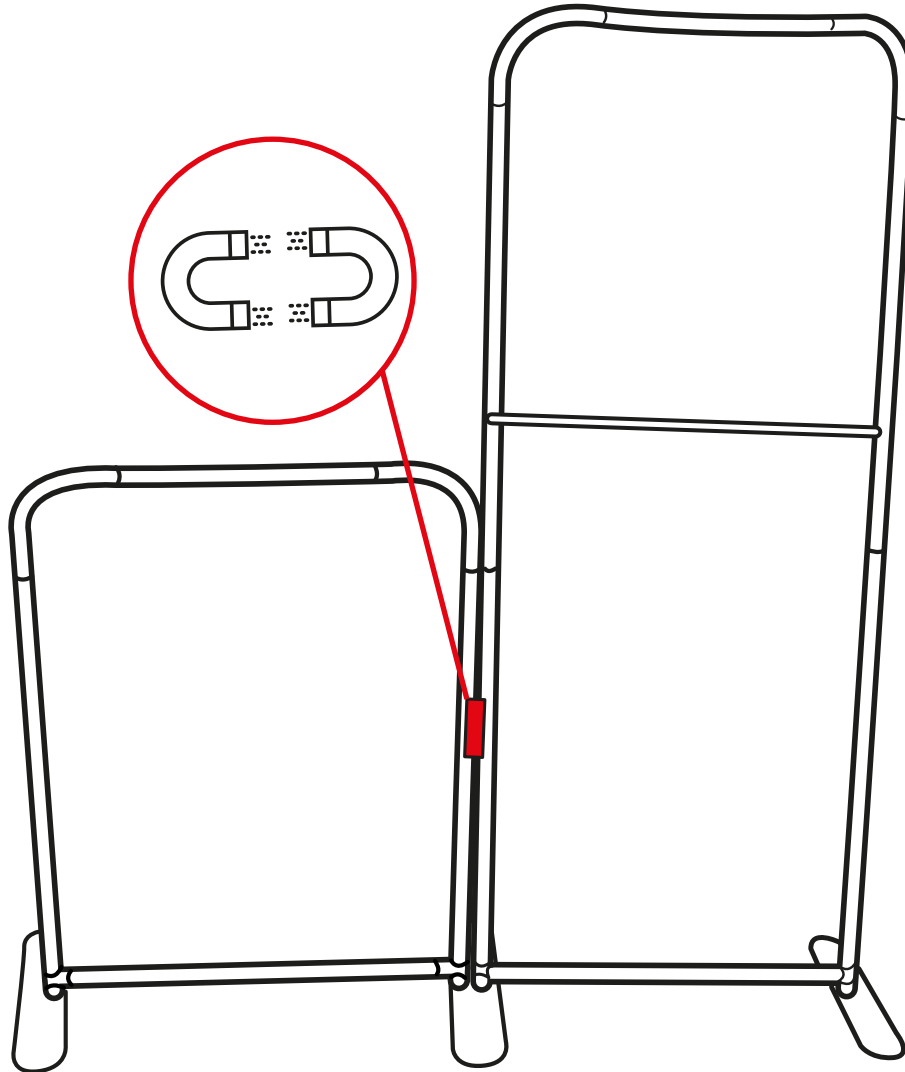

810 Straight Frame and 820 Straight Frame

Remove one foot from second frame and align both frames on one foot

NOTE: FOLLOW OPTION 2 FOR HALF FEET TO CONNECT TWO FRAMES ON ONE FOOT

